

RE-INSTALL INSTRUCTIONS (after re-keying)

(SHOWN WITHOUT HANDLE)

Before re-installing, check the timing of the latch-locking cam, which can be found by viewing the lockset in the orientation show at right.

Then, use a screwdriver to rotate the locking cam clockwise to the right direction as shown at right. (towards latch bolt)

Finally, push back the lever, turn the key counter-clockwise 90°, and pull out the key.

User Manual

How to lock the door :
Insert the key and rotate clockwise until it stops.
Turn the key back to the position it was and pull out the key.

How to unlock the door :
Insert the key and rotate counterclockwise until it stops.
Turn the key back to the position it was and pull out the key.

